

Supported Operating Systems for Ethernet Adapter Cards

The reference table below lists operating systems supported by Allied Telesyn Ethernet adapter cards.

How to Use this Table

Select the Operating System manufacturer and version in the column on the left, and then locate your Allied Telesyn Ethernet Adapter Card in the row across the top.

Note: Although our adapter cards should work with all of the operating systems noted below, Allied Telesyn cannot always guarantee full compatibility. Operating systems that rely on legacy or third-party device drivers are **denoted with an "LS" for *limited support***. All other operating systems are fully supported with device drivers that have been tested by Allied Telesyn (**denoted with an "S"**).

Supported Operating Systems

Operating System	Network Adapter Card												
	AT-1700	AT-2000	AT-2400	AT-2450FT	AT-2450F	AT-2450FTX	AT-2500	AT-2560	AT-2700	AT-2800	AT-2930T	AT-2970	AT-USB100
Artisoft Lantastic (all versions)	LS	LS	LS	LS	LS	LS	LS		LS				
Banyan Client	LS	LS	LS	LS	LS	LS	LS		LS				
Server v6.3									LS				
DEC Pathworks v5	LS	LS	LS	LS	LS	LS	LS	LS	LS	LS			
FTP PC/TCP v2.x	LS	LS	LS	LS	LS	LS	LS	LS	LS	LS			
IBM Lan Server	LS	LS	LS	LS									
OS/2	LS	LS	LS	LS	LS	LS	LS	LS	LS	LS			
LanWorks BootWare ROMS	LS	LS		LS	LS	LS			LS	LS			
Linux All brands	LS	LS		LS	LS	LS	LS		LS				LS
Macintosh OS 8.51								S					
OS 8.6								S					
OS 9								S					
Microsoft LAN Manager	LS	LS											
WFW 3.11	LS	LS	LS	LS	LS	LS	LS	LS	LS				
Windows 95	LS	S	S	LS	S	S	S	S	S				
Windows 98/ME		S	S	LS	S	S	S		S	S	S	S	S
Windows NT 4	LS	S	S	LS	S	S	S	S	S			S	
Windows 2000 (Professional & Server)	LS	LS	S	LS	S	S	S		S	S	S	S	S
Windows XP (Home, Prof. & Server)	LS	LS	S	LS	S	S	S		S	LS	S	S	S
Novell Netware v3.x	LS	LS	LS	LS	LS	LS	LS	LS	LS				LS
NetWare v4.x	S	LS	S	LS	S	S	S	S	S				S
Netware v5.x	S	LS	S	LS	S	S	S	S	S				S
Santa Cruz Operations SCO UNIX v3	LS	LS	LS	LS	LS	LS	LS		LS				
SCO UNIX v4		LS	LS	LS	LS	LS	LS		LS				
SCO UNIX v5		LS	LS	LS	LS	LS	LS		LS				
SCO UNIX v7				LS	LS	LS			LS				
SUN PC-NFS	LS	LS	LS	LS	LS	LS	LS	LS	LS				
SUN Solaris Sparc													LS
SUN Solaris x86				LS	LS	LS			LS				

S = Full Support **LS = Limited Support** (see note above)